


# Product Description


## Korogard® Rub Strips

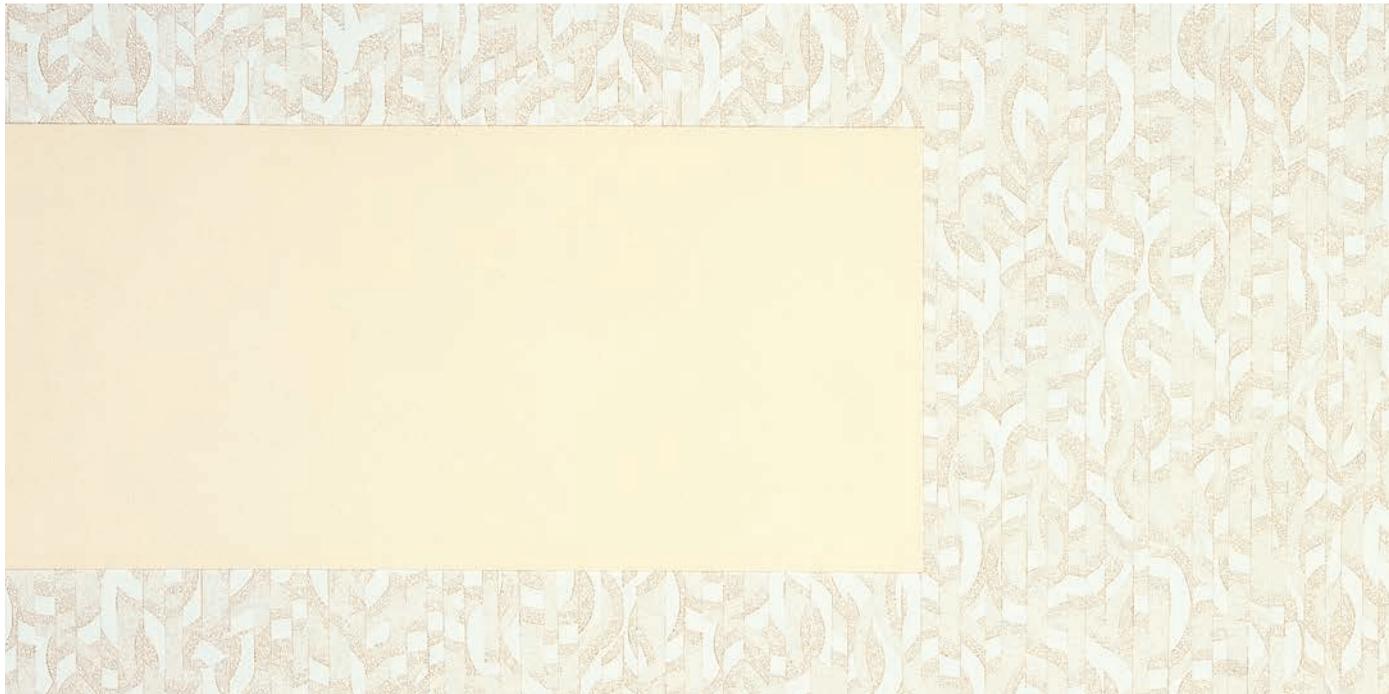

**Korogard®** Rub Strips provide protection against damage from chairs, gurneys, and other abuse. **Korogard** Rub Strips are typically used in waiting rooms, high-traffic corridors, or equipment storage areas. **Korogard** Rub Strips are available in all standard **Korogard** colors and thicknesses, in 4" (101.6mm) to 24" (609.6mm) widths and lengths up to and including 96" (2.43m).

**Korogard** Rub Strips are backed by a limited five-year warranty. They are chemical- and stain-resistant to prevent discoloration and surface damage. **Korogard** Rub Strips are fire rated for Surface Burning Characteristics as classified by Underwriters Laboratories, Inc. and meet national building code standards.

For more information on **Korogard** Rub Strips, please call your local **Korogard** distributor or 800-628-0449.

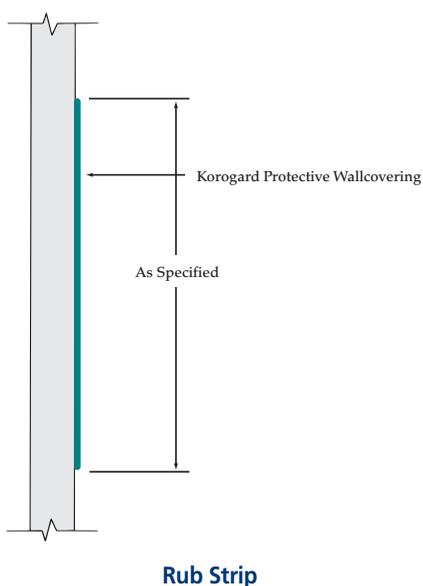

# Product Description

## Product Guide Specification

### SECTION 10 26 00 WALLCOVERING

#### **PART 1 GENERAL**

##### **1.01 SECTION INCLUDES**

Protective Rub Strips.

##### **1.02 SUBMITTALS**

- A. Comply with requirements of Section 01 33 00—Submittals.
- B. Product Data: Submit manufacturer's product data including installation instructions.
- C. Samples: Submit 7" (177.8mm) x 9" (228.6mm) sample of each type, thickness, color, and texture to be installed for Architect's approval.
- D. Certification: Submit manufacturer's certification indicating Protective Wallcovering meets specified requirements.
- E. Maintenance Instructions: Submit manufacturer's maintenance instructions for Protective Wallcovering.

##### **1.03 QUALITY ASSURANCE**

Installer Qualifications: Use installer experienced in the installation of Protective Rub Strips on projects of similar size and complexity.

##### **1.04 DELIVERY, STORAGE, AND HANDLING**

- A. Delivery: Deliver materials to site in manufacturer's original, unopened containers and packaging with labels clearly indicating manufacturer and material.
- B. Storage:
  1. Store materials indoors in a clean, dry area protected from damage and in accordance with manufacturer's instructions.
  2. Maintain storage temperature above 50°F (10°C).
  3. Store materials flat. Do not stand rolls or sheet on end.
- C. Handling: Protect materials during handling and installation to prevent damage.

##### **1.05 ENVIRONMENTAL REQUIREMENTS**

- A. Maintain constant minimum air temperature of 65°F (18°C) for a minimum of 48 hours before and during installation.
- B. Maintain wall temperature between 65°F (18°C) and 85°F (29°C) during installation.
- C. Do not expose walls to direct sunlight during or after installation.
- D. Do not install if relative humidity is greater than 80%.

#### **PART 2 PRODUCTS**

##### **2.01 MANUFACTURER**

Koroseal Wall Protection Systems,  
A Division of RJF International Corporation.

##### **2.02 PROTECTIVE WALLCOVERING**

Koroseal "Korogard" Protective Rub Strips:  
Rigid high-impact sheet.

1. Fire Rating: [Class A] [Class B] [Class C].
2. Thickness: [0.028" (0.71mm)] [0.040" (1.02mm)] [0.060" (1.52mm)] [0.080" (2.03mm)] [0.125" (3.18mm)].
3. Height: [4" (101.6mm)] [6" (152.4mm)] [8" (203.2mm)] [12" (304.8mm)].
4. Edges: [Square] [Beveled].
5. Backing: [Adhesive backing] [Unbacked].
6. Color: Color to be selected by Architect from manufacturer's standard colors.

##### **2.03 ADHESIVES**

Furnish adhesives approved by Protective Rub Strip manufacturer.

##### **2.04 ACCESSORIES**

- A. Accessory Moldings: Furnish accessory moldings by Protective Rub Strip manufacturer to ensure accurate match of colors, dimensions, and physical properties.
- B. Caulk: Furnish color-matched caulk by Protective Rub Strip manufacturer to ensure accurate match of colors.

#### **PART 3 EXECUTION**

##### **3.01 EXAMINATION**

Inspect wall surfaces to receive Protective Rub Strip. Notify the Architect in writing if wall surfaces are not acceptable. Do not begin installation until unacceptable conditions have been corrected.

##### **3.02 SURFACE PREPARATION**

- A. Prepare walls in accordance with manufacturer's written instructions.
- B. Remove dust, dirt, grease, oil, loose paint, scale, and existing wallcovering.
- C. Resurface uneven wall surfaces and damaged walls.

##### **3.03 INSTALLATION**

- A. Install Protective Rub Strip to walls in accordance with manufacturer's written instructions.
- B. Allow Protective Rub Strip and adhesive to precondition for a minimum of 24 hours at a temperature between 65°F (18°C) and 85°F (29°C) before installation.
- C. Install strips with texture running in the same direction for uniform appearance.

##### **3.04 CLEANING**

- A. Clean Protective Rub Strip in accordance with manufacturer's instructions.
- B. Remove excess adhesive and layout marks.



**KOROGARD®**  
WALL PROTECTION SYSTEMS

800-628-0449 • [www.korogard.com](http://www.korogard.com) • Division 10 26 00